


OPERATORS GUIDE FOR NEAL 6226 COPIER

1. Ensure the 6226 is connected to mains power outlet via the mains lead provided.
2. Switch unit on via rear panel **ON/OFF** switch. Cassette positions should illuminate.
3. Insert master recorded cassette into left position (**MASTER**) on 6226 copier.
4. Insert blank audio cassettes into copy positions **SLAVE (6226)**.
5. Press **REWIND** on the 6226. Any tapes not fully rewound will now rewind. Wait until **STOP** led illuminates. Then press **STOP**.
6. Press **RECORD** on the 6226.
7. Cassette will copy at X16 speed.
8. At end of copying process all cassettes will automatically rewind.

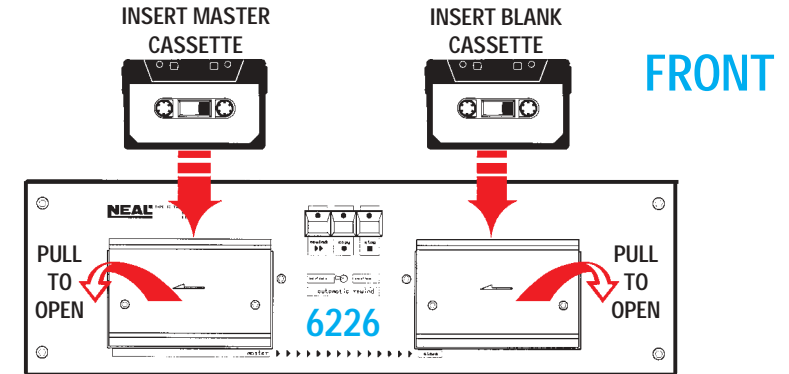

PROBLEM

No illumination in cassette positions.

Copier will not rewind.

Copier rewinds before end of cassette

Copier always copies to end of cassette even though interview only occupies half of tape.

ACTION

Check mains lead is connected to mains outlet.
Check copier is switched on at rear panel.

The tape is already rewound or no master cassette inserted.

This is normal if end of cassette switch is set to 'end of audio'

Change position of cassette switch from 'end of tape' to 'end of audio'

ENSURE BLANK CASSETTES ARE OF AT LEAST EQUAL LENGTH TO MASTER CASSETTE
(I.E. ONLY USE THE SAME TAPE TYPE C45 OR C60 OR C90)
DO NOT USE MIXED LENGTHS

