


step 1

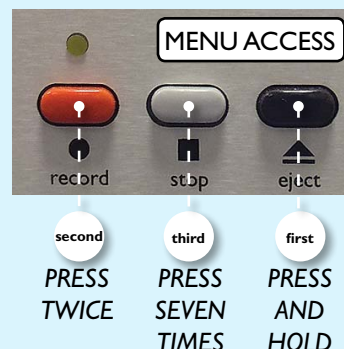

Press and hold **EJECT** button for the duration of this first step. Press **RECORD** button twice and the **STOP** button seven times. **SETUP TOP LEVEL** should appear on the LCD screen.



step 2



Use **RECORD** button for scrolling up and **STOP** button for scrolling down through the menus. Press **RECORD** button once until **CONFIG TIME AND DATE** shows in LCD display, press **EJECT** to get into the **TIME AND DATE SETTING**

step 3



Press **EJECT** to scroll through to the digit that needs changing - Day, Month, Year, Hour, Minute. The one you wish to change will flash when selected. Press either **RECORD** or **STOP** to change the time remembering that you can only go back to zero or forward to zero. So, to go from 5 past the hour to 5 to the hour you would have to go forward not backwards and the reverse for going from 5 to the hour to 5 past the hour.

step 4



When correct time is set, press the **EJECT** button to come out of time set. Press the **STOP** button once to take you to **EXIT** and then press **EJECT** to save the changes to the recorder.